
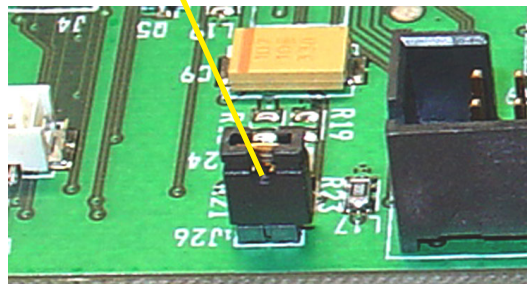


DOCKING BOARD JUMPER CONFIGURATIONS (MODELS RL5000/FT5000)

Jumper Configurations		
Location	RL5000	FT5000
J26	Jumper installed	Jumper removed
<i>Note: Docking board assembly shipped with jumper installed. Remove jumper for Model FT5000 units.</i>		

DOCKING BOARD ASSEMBLY (SHOWN WITH JUMPER INSTALLED)

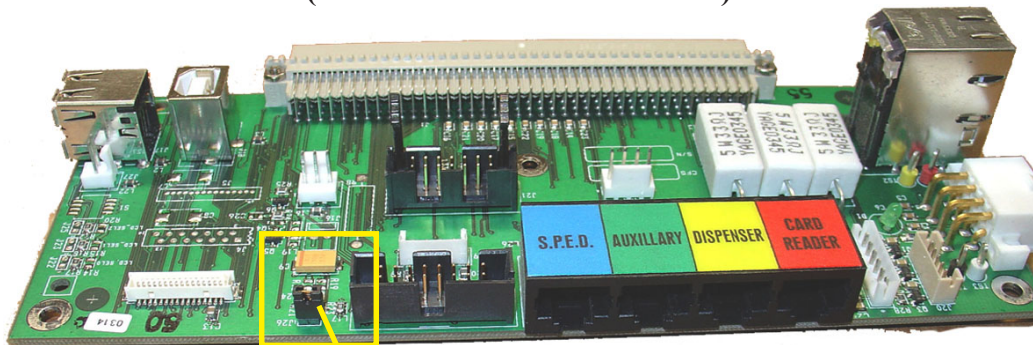

JUMPERS LOCATION