

LCD BACKLIGHT BULB REPLACEMENT INSTRUCTIONS

FOR USE WITH:

PART No. 9600-6067 MONOCHROME DISPLAY BULB REPLACEMENT KIT

PART No. 9600-6068 COLOR DISPLAY BULB REPLACEMENT KIT

Version 1.0

TDN 7103-0063 6/98

TRITON SYSTEMS, INC.

522 E. Railroad Street

Long Beach, MS 39560

PHONE: (228) 868-1317

FAX: (228) 868-0437

COPYRIGHT NOTICE

Copyright © 1998 Triton Systems , Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form, by any means whatsoever, without the express written permission of Triton Systems, Inc., 522 E. Railroad Street, Long Beach, MS 39560, USA.


CONTENTS

SECTION 1 - MONOCHROME DISPLAY BULB REPLACEMENT 1-1

SECTION 2 - COLOR DISPLAY BULB REPLACEMENT 2-1

MONOCHROME DISPLAY BULB REPLACEMENT PROCEDURE

SECTION 1 - MONOCHROME DISPLAY

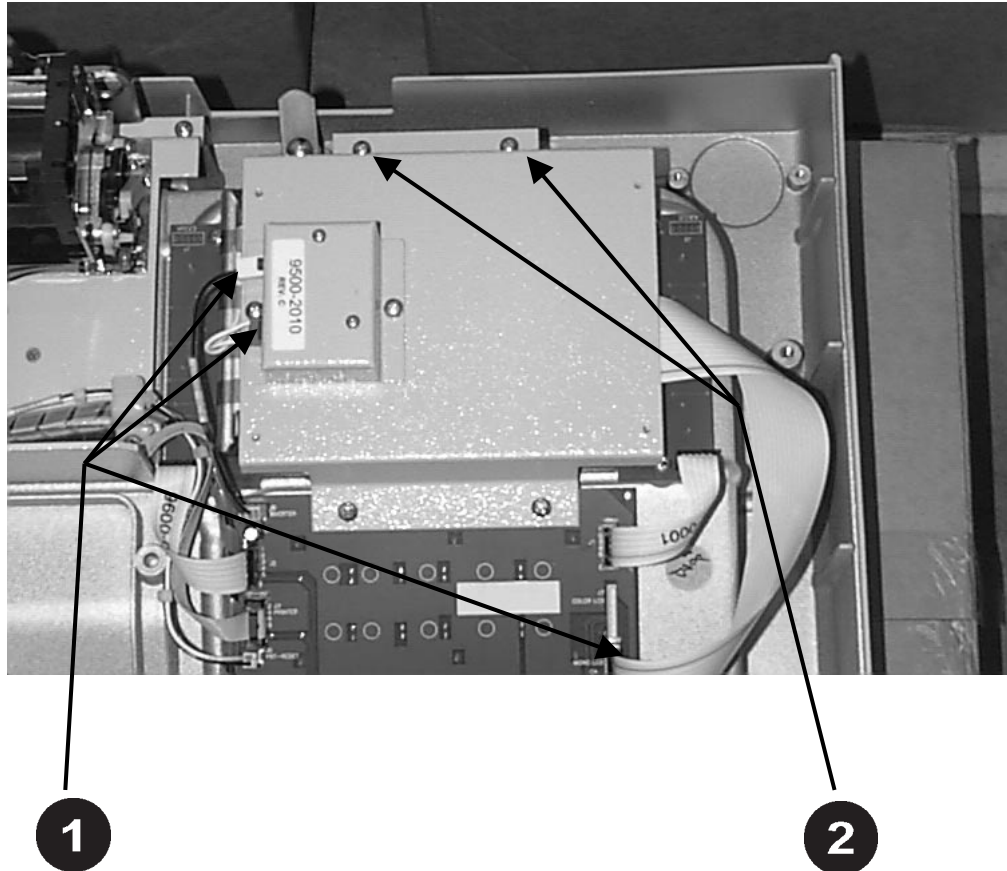


WARNING

**BEFORE STARTING, BE SURE TO
UNPLUG THE UNIT TO PREVENT
ANY CHANCE OF ELECTRICAL
SHOCK.**

A) Remove the display assembly from the 96XX unit.

- (1) Disconnect the three connectors from the display assembly.
- (2) Unscrew the four screws.


SECTION 1 - MONOCHROME DISPLAY

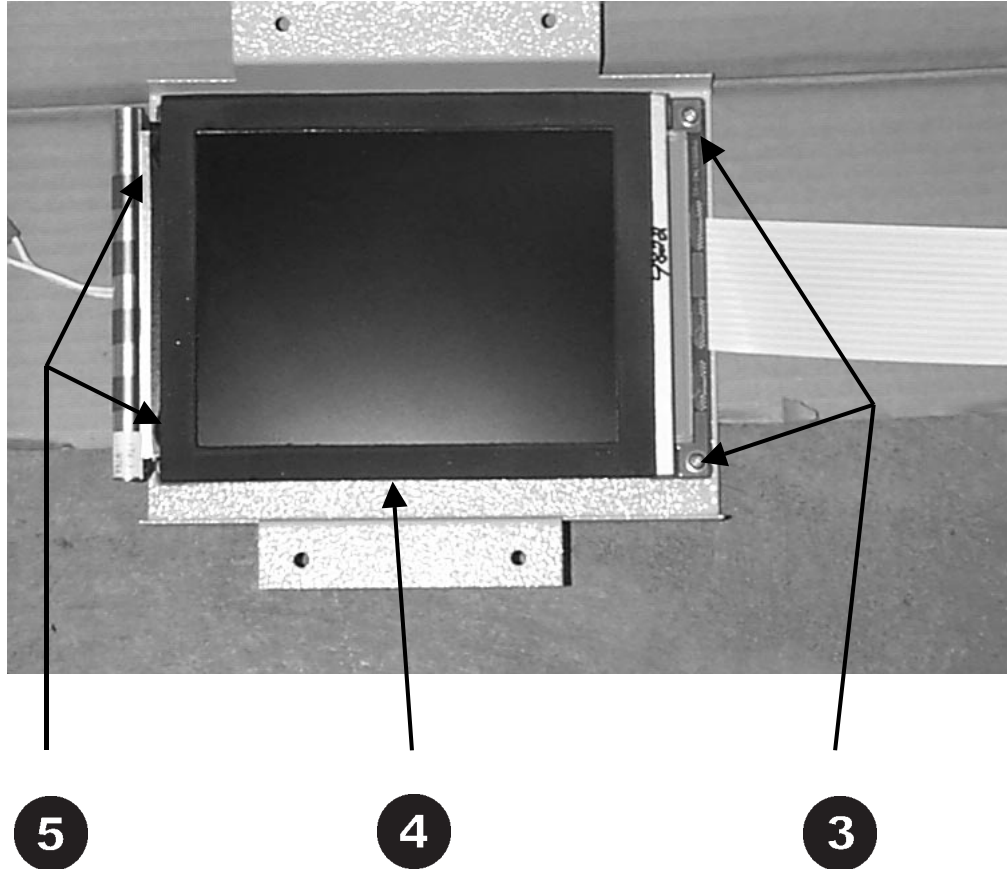

B) Remove the display from the metal plate.

- (3) Unscrew the two exposed screws on the right side of the display.
- (4) Carefully peel the black gasket material from the surface of the display.
- (5) Unscrew the two remaining screws that were under the gasket and lift the display away from the metal plate.


SECTION 1 - MONOCHROME DISPLAY

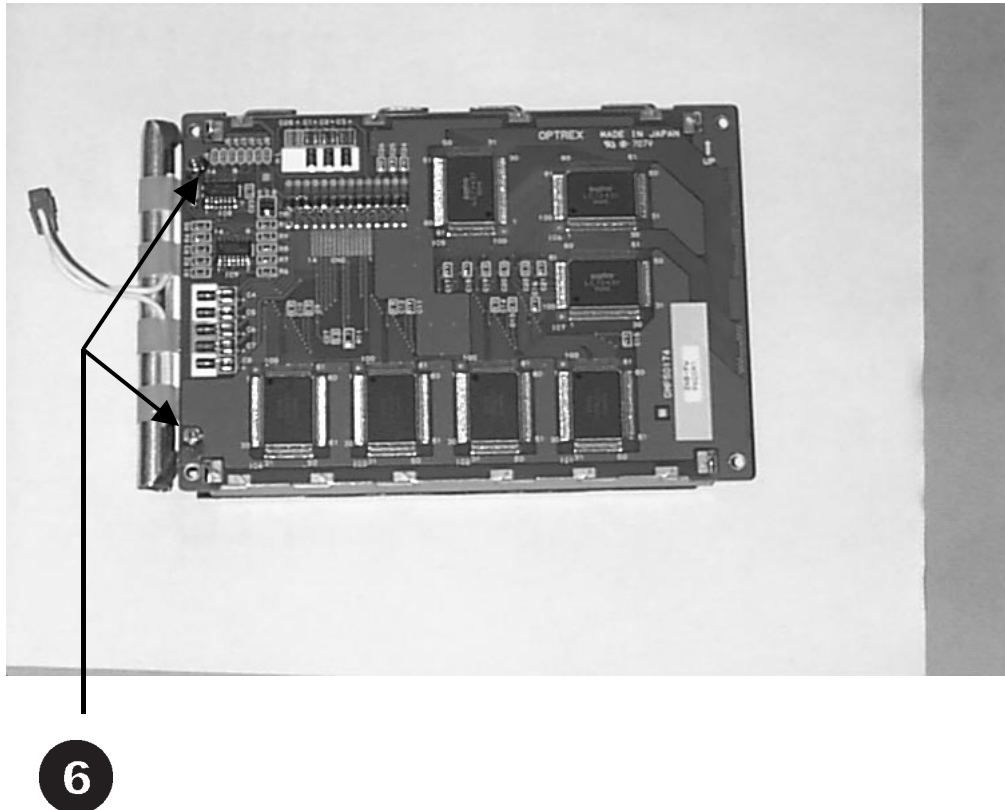

C) Remove the bulb assembly from the display. (Note: Be sure to place the display on a soft surface to prevent any scratching.)

(6) Remove these two nuts (4mm) from the backside of the display.

SECTION 1 - MONOCHROME DISPLAY

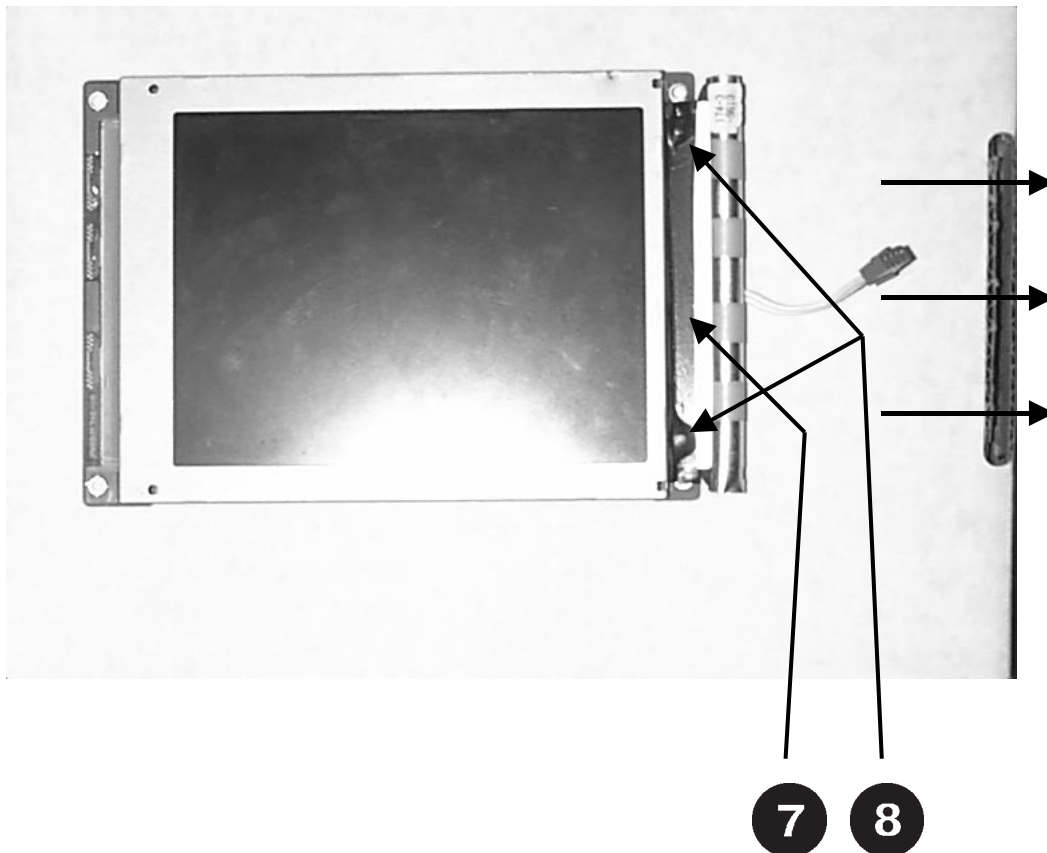

C) Remove the bulb assembly from the display (continued from previous page).

- (7) Peel away the black electrical tape and unscrew the two screws hidden underneath.
- (8) Pull out the bulb assembly to the right in the directions of the horizontal arrows shown. Replace with a new bulb assembly.

D) Reinstalling the display back onto the 96XX unit.


Assemble in the reverse order of disassembly.

SECTION 1 - MONOCHROME DISPLAY

THIS PAGE INTENTIONALLY LEFT BLANK.

**COLOR DISPLAY
BULB REPLACEMENT PROCEDURE**

SECTION 2 - COLOR DISPLAY

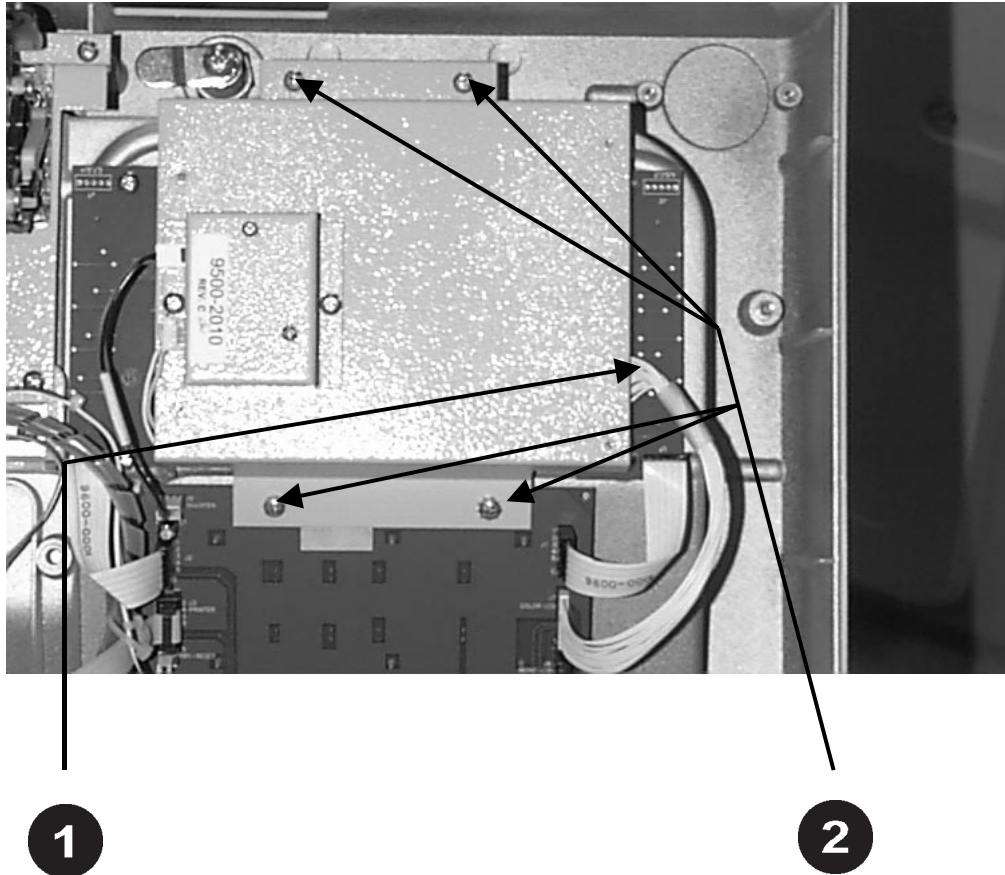


WARNING

**BEFORE STARTING, BE SURE TO
UNPLUG THE UNIT TO PREVENT
ANY CHANCE OF ELECTRICAL
SHOCK.**

A) Remove the display assembly from the 96XX unit.

- (1) Disconnect the three connectors from the display assembly.
- (2) Unscrew the four screws.


SECTION 2 - COLOR DISPLAY

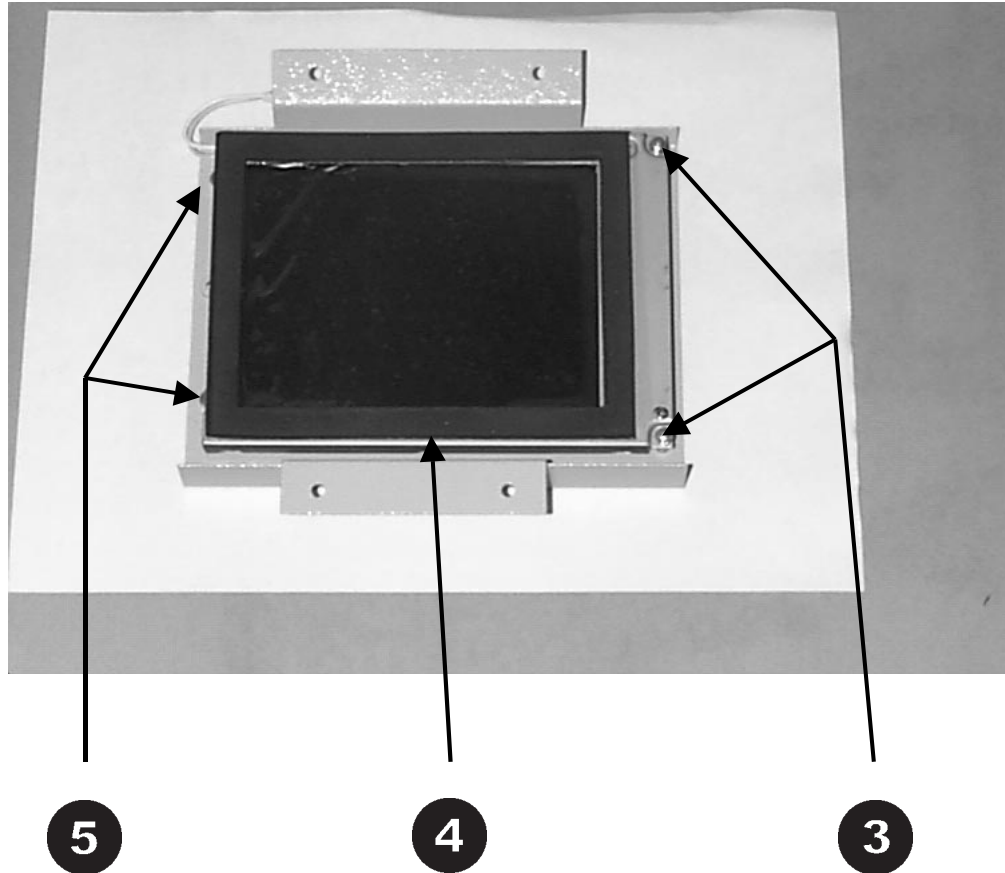

B) Remove the display from the metal plate.

- (3) Unscrew the two exposed screws on the right side of the display.
- (4) Carefully peel the black gasket material from the surface of the display.
- (5) Unscrew the two remaining screws that were under the gasket and lift the display away from the metal plate.

SECTION 2 - COLOR DISPLAY

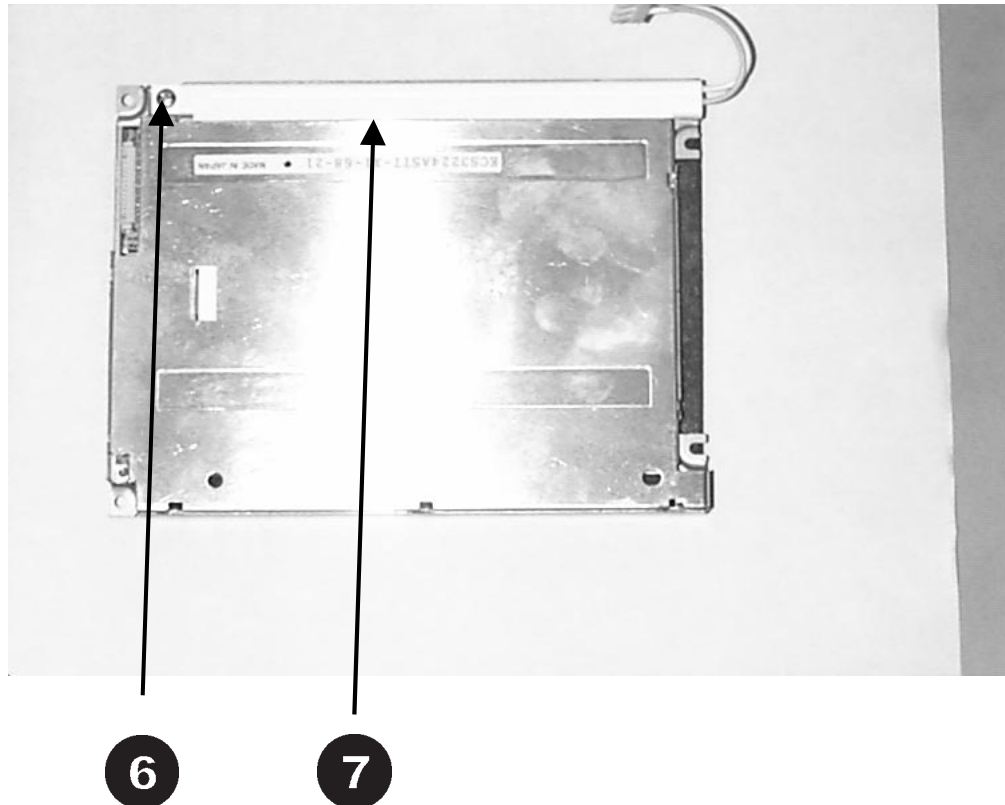

C) Remove the bulb from the display. (Note: Be sure to place the display on a soft surface to prevent any scratching.)

- (6) Unscrew the screw holding the bulb to the display.
- (7) Lift the bulb up from the display and replace the bulb.

D) Reinstalling the display back onto the 96XX unit.

Assemble in reverse order of disassembly.