


# RL331X ANCHOR FOOTPRINT

## CABINET "FOOTPRINT"

### Anchor "footprint" - Business

FRONT

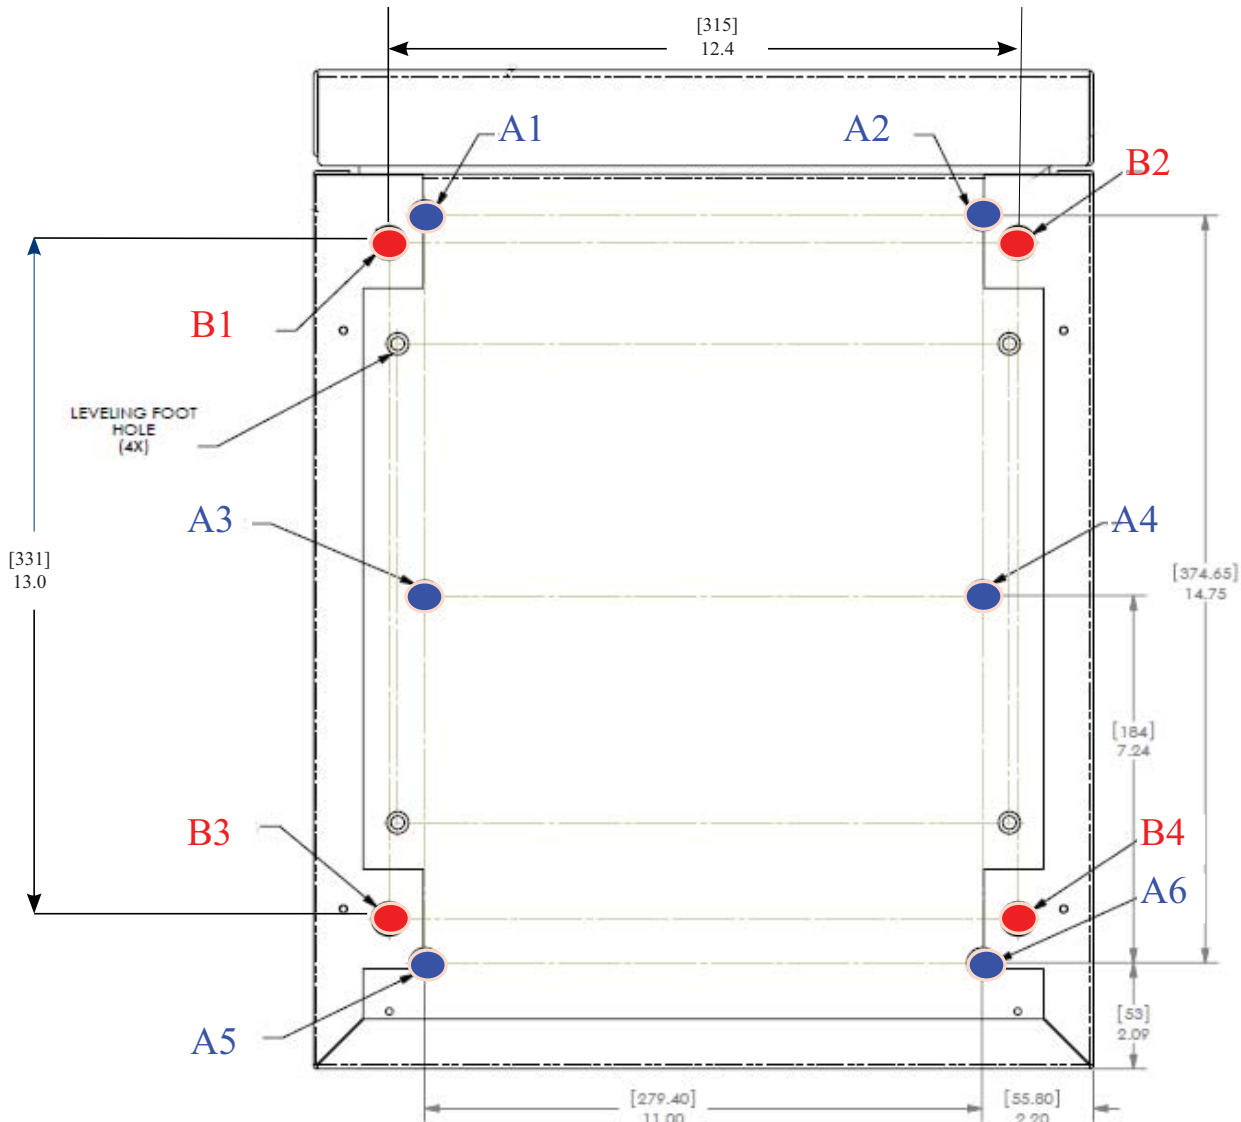

REAR

### TRITON ANCHOR POINTS

RL2000, RL5000, 9100, 9600 Deep

A1, A2, A5, A6

RL1600, 9600 Shallow

A3, A4, A5, A6

### GENMEGA ANCHOR POINTS

1700

B1, B2, B3, B4