

# **TDM 100 Packaging Instructions**

TDN 07103-00253 December 11, 2014

## **Corporate Headquarters:**

21405 B Street Long Beach, MS 39560 Phone: (228) 575-3100


Fax: (228) 575-3101

#### **COPYRIGHT NOTICE**

© 2014 Triton. All Rights Reserved. TRITON logo is a registered trademark of Triton Systems of Delaware, LLC

## Introduction

This document describes how to package a TDM 100 Dispenser.

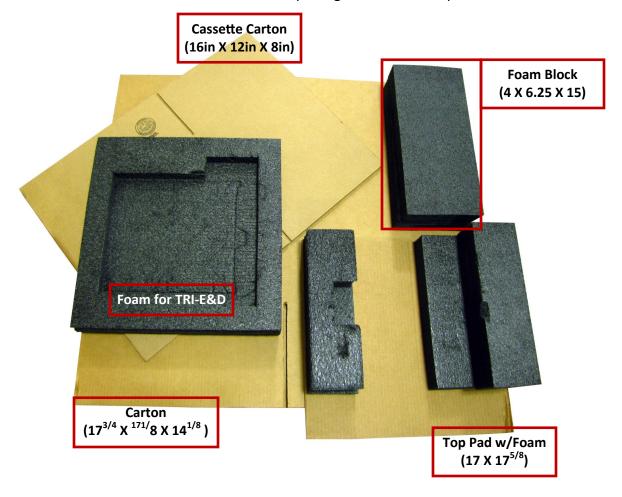

Tools Required	Packaging tape Bubble wrap	
KIT P/N:	TDM 100 Packaging Kit	
06300-01100		
PARTS SUPPLIED IN KIT		
Description		Quantity
Carton TDM C and D 17 <sup>3/4</sup> x 17 <sup>1/8</sup> x 14 <sup>1/8</sup>		1
Cassette Carton: 16 inches X 12 inches X 8 inches		1
Foam   Foam for TRI-E & D		1
Pad w/Foam TDM Top Pad w/Foam (plain)  17 x 17 <sup>5/8</sup>		1
Insert, Foam Block 4 X 6.25 X 15 § NMD-100		1

## **TDM 100 PACKAGING INSTRUCTIONS**

**1.** Assemble both the carton and cassette carton. Ensure that the bottom of the box is reinforced with enough packaging tape so that the package will be sturdy enough to ship the dispenser.



**2.** Locate the TDM 100 Dispenser. Remove the cassette and reject from the dispenser and wrap them in bubble wrap. Line the cassette carton with bubble wrap and place the cassette and reject into the carton. Close the box lids accordingly and seal with packaging tape.









**3.** Locate the Foam for TRI-E&D (large, square piece; thinner than the block). Place the foam inside the larger carton, flat side down.



**4.** Place the TDM 100 Dispenser into the remaining carton. Place the Foam Block inside the carton as well, and position it to eliminate the chance of shifting during shipment.



Foam block



## **TDM 100 PACKAGING INSTRUCTIONS**

**5.** Locate the Top Pad with Foam. Position the Top Pad foam side down onto the dispenser so that the foam fits snug on the dispenser, with the larger foam insert positioned by the smaller motor opposite the belts. Conclude by closing the box lids and sealing the carton with packaging tape.



