



HIGHTOPPER SIGN
INSTALLATION INSTRUCTIONS

FOR 9600-SERIES *miniATM*[™]
CASH DISPENSERS

TDN 07103-00052 10/00

CORPORATE HEADQUARTERS:

522 E. Railroad Street
Long Beach, MS 39560
PHONE: (228) 868-1317
FAX: (228) 868-0437

**RMA (RETURN MATERIAL AUTHORIZATION)
RETURN ADDRESS:**

21405 B Street
Long Beach, MS 39560

Copyright © 2000 Triton Systems, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form, by any means whatsoever, without the express written permission of Triton Systems, Inc.

I.

Equipment Needed

- #2 Phillips Magnetic Screwdriver 6" Long (1) (not supplied)
- Hightopper Sign Kit, includes:
 - Front Sign Housing Assembly (1)
 - Back Sign Housing Assembly (1)
 - Fluorescent Bulb (1)
 - #8-32 x 3/8" Pan Head Phillips Screws (8) (Spares included)

II. Assembly Procedure

1. Disconnect power to the ATM and open the hood. If the ATM is already equipped with a small, lighted sign, unplug the power cord for the sign from the side of the card cage.
2. Remove the two screws that attach the small sign housing to the hood and set aside (see fig. 2-1). Remove the small sign housing from the unit.



Figure 2-1

3. If a fluorescent bulb wiring harness assembly is installed in the unit, remove the light assembly by removing the four screws that attach the ballast and the light socket to the ATM hood.
4. Remove the Hightopper Sign kit from the shipping box. Remove the foam cradles from the edges of the Hightopper sign.
5. Set the Hightopper sign face down. Remove the four (4) screws that attach the Back Sign Housing Assembly to the Front Sign Housing Assembly and set them aside (see fig. 2-2). Carefully lift off the Back Sign Housing Assembly and set aside—take care not to remove the Side Graphics Signs as they are taped to the Back Housing.



Figure 2-2

6. Remove the four (4) screws that attach the two sign Mounting Brackets to the Back Sign Housing and remove the brackets (see fig. 2-3). Place and align the Back Sign Housing Assembly on top of the ATM. Place the two sign mounting brackets back onto the Back Sign Housing. Align the holes in the brackets with the mounting bosses on the Back Sign Housing and the ATM. Attach the Back Sign Housing Assembly to the top of the hood with four (4) #8-32 x 3/8" (supplied) (see fig. 2-3).
7. Remove the packed contents from the Front Sign Housing Assembly and unwrap them.
8. Remove the fluorescent bulb from the shipping box and plug the bulb into the connector located on the ballast on the Back Sign Housing Assembly (see fig. 2-3). NOTE: the connector is keyed and will only plug into the bulb when properly aligned.
9. Place the bulb into the two bulb mounting brackets located in the center of the Back Sign Housing Assembly (see fig. 2-3).

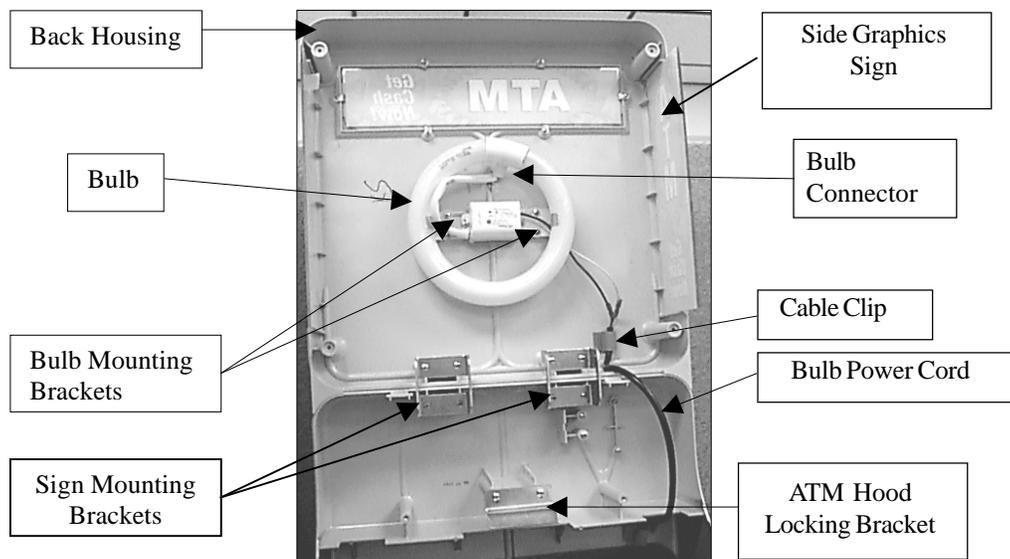


Figure 2-3

10. Remove the Tie-wrap from the fluorescent bulb power cord and route the power cord down the right-hand side of the unit. Use the cable clips already installed in the unit and on the Back Sign Housing Assembly to hold the power cord in place.

11. Plug the power cord into the power supply. Turn on the unit and check to see that the fluorescent bulb lights. If the bulb does not light, turn off power to the unit and check for proper connections on the fluorescent bulb wiring assembly.

12. Place the Front Sign Housing Assembly on top of the unit and attach the lower part of the Front Sign Housing Assembly to the hood through the two lower mounting bosses using two (2) #8-32 x 3/8" pan head phillips screws (see fig. 2-4). When aligning the Front to the Back, ensure the Side Graphics Signs fit into the slots on the interior of the Front Housing.

13. Make sure the sides fit properly once the two halves are mated together, and ensure any dangling cables are positioned off to the side of the locking bracket (see fig. 2-4).

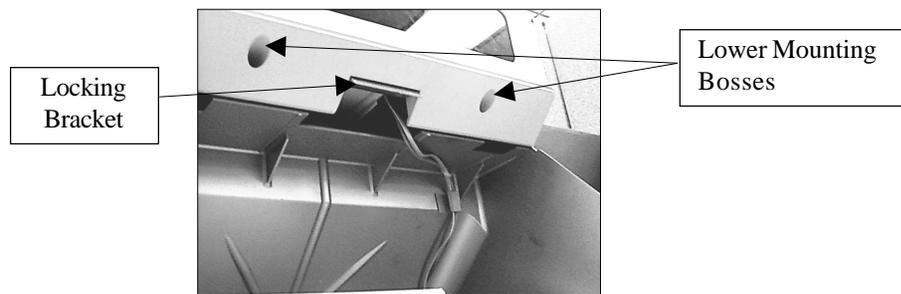


Figure 2-4

14. Attach the Front Sign Housing Assembly to the Back Sign Housing Assembly using the four (4) #8-32 x 3/8" pan head phillips screws removed earlier.

15. Examine the inside of the hood and remove any loose hardware.

16. Reconnect power and secure the ATM.

17. Installation complete.