

TECHNICAL

BULLETIN

TECHNICAL BULLETIN: 14-02

DATE: January 7, 2014 Revised: June 17, 2014

SUBJECT: HCDU Cassette Side Adjustment for Polymer Notes (Revised)

AVAILABILITY: All Canadian Triton Distributors and Third Party Service Providers

This bulletin addresses:		Recommended Implementation is:	
	Documentation Changes	X	Now for all affected units
X	Hardware Service Issues		All affected units during next service visit
	Software Announcements		Optional
	Technical Tips		No implementation required

DESCRIPTION:

Triton announces the side and height adjustments required for HCDU cassettes to properly dispense Canadian Polymer notes. Perform the following steps to adjust the cassette from the US settings to Canadian settings.


No additional parts are required to make this adjustment however a #1 Phillips screwdriver will be needed.

Step 1 – Unlock and open the cassette that needs adjusting.






Step 2 – Loosen, DO NOT REMOVE, the two screws securing the right side rail.

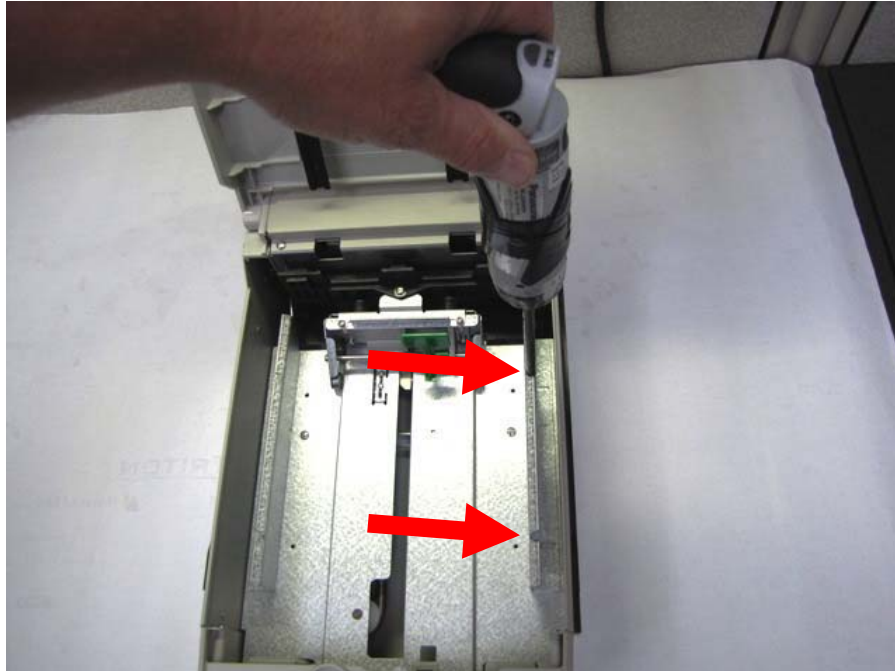


Step 3 – Slide the rail to the left as far as it will go and tighten the screws.

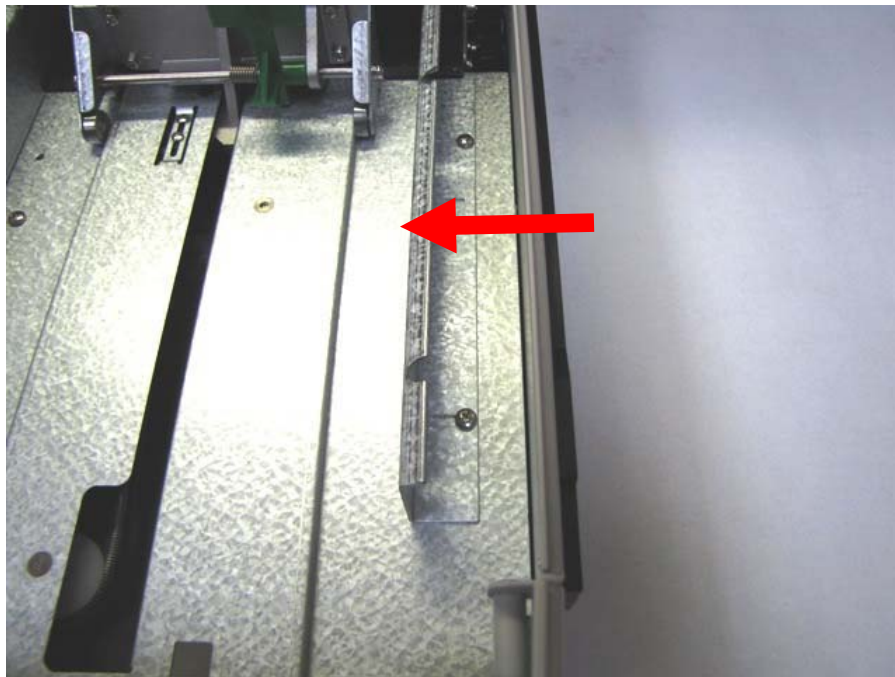



Step 4 – Remove the two screws securing the right height adjuster bar.

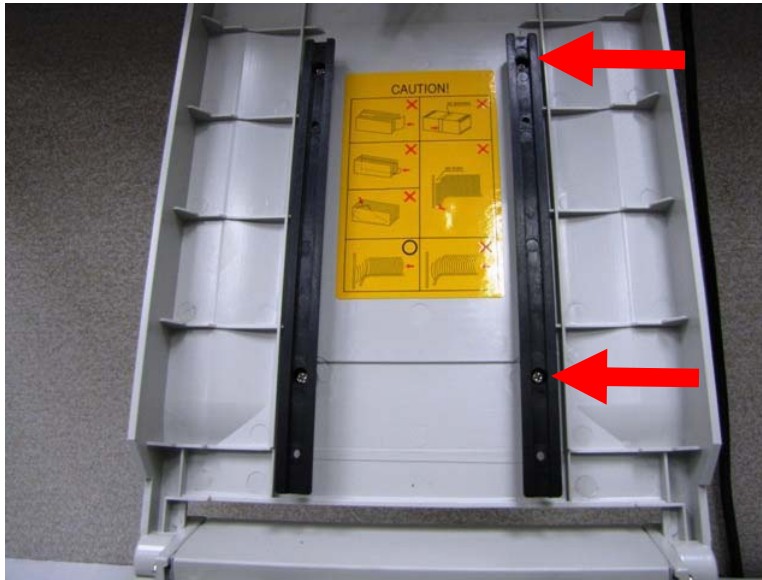

Step 5 – Turn the height adjuster bar around.




United States Height



Canadian Height



Step 6 – Reinstall the previously removed screws to secure the right height adjuster bar. Repeat Step 4 – 6 for the for the left side height adjuster. Ensure the bottoms of the height adjusters are even (yellow line).

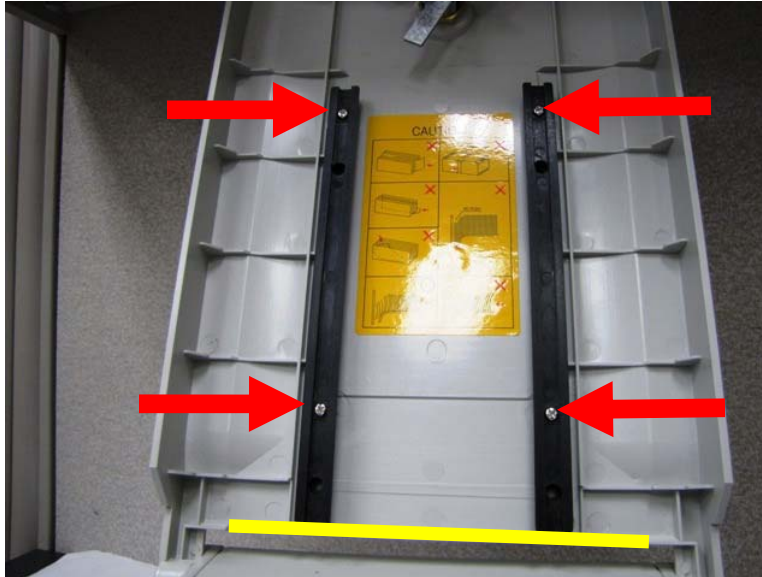

Step 7 – The cassette is now ready for Canadian Polymer note dispense.

If you have any questions, please contact Technical Support or our Parts Department at 1-228-575-3100 from outside North America or toll free in the U.S./ Canada 1-800-259-6672.