



ADDENDUM
9640-SERIES CASH DISPENSER
BCU SHIPPING SPACER
REMOVAL

VERSION 1.0

TDN 07103-00003 04/01

CORPORATE HEADQUARTERS:

522 E. Railroad Street
Long Beach, MS 39560
PHONE: (228) 868-1317
FAX: (228) 868-0437

**RMA (RETURN MATERIAL AUTHORIZATION)
RETURN ADDRESS:**

21405 B Street
Long Beach, MS 39560

COPYRIGHT NOTICE

Copyright © 2001 Triton Systems, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form, by any means whatsoever, without the express written permission of Triton Systems, Inc.

****IMPORTANT****

A cardboard spacer is located behind the BCU assembly! This spacer must be removed before using the dispensing mechanism for the first time! Follow this procedure to remove the spacer!

1. Unlock and open the security cabinet (vault).
2. Slide the dispensing mechanism out on the rails.

WARNING!

IF THE ATM CABINET HAS NOT BEEN INSTALLED (BOLTED TO THE FLOOR) A TIPPING HAZARD EXISTS WHEN THE DISPENSING MECHANISM IS SLID OUT ON THE SUPPORT RAILS! MAKE SURE THE CABINET IS FIRMLY SUPPORTED/BRACED TO PREVENT TIP-OVER!

3. Note the Warning label over the AC input connector and ON/OFF switch located on the front of the dispenser behind the throat, shown in Figure 1. **DO NOT REMOVE THE LABEL AT THIS TIME!**
4. Remove the strip of packing tape that secures the BCU cover, shown in Figure 2. Close the top lid and apply tape across the lid to hold it in place during shipping.
5. Open the BCU cover. Note the cardboard spacer, as shown in Figure 3. Remove the spacer.
6. Replace the BCU cover.
7. Remove the Warning Label over the AC input connector and ON/OFF switch, shown in Figure 1.
8. Slide the mechanism back into the cabinet.

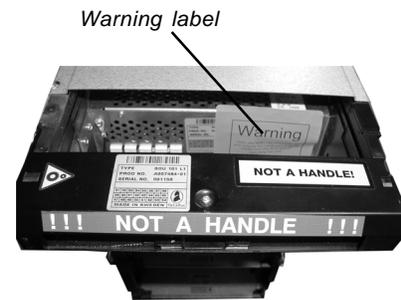


Figure 1. Warning Label.

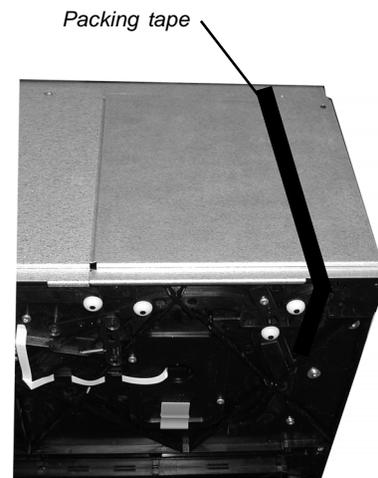


Figure 2. BCU Cover secured with packing tape.

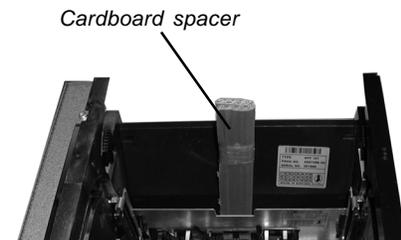


Figure 3. BCU Cover removed and cardboard spacer visible.