



TECHNICAL

BULLETIN

TECHNICAL BULLETIN: 12-08

DATE: September 26, 2012

SUBJECT: MiniMech without Teflon Strips Approved


AVAILABILITY: All Authorized Triton Distributors and Third Party Service Providers

This bulletin addresses:		Recommended Implementation is:	
	Documentation Changes		Now for all affected units
	Hardware Service Issues		All affected units during next service visit
	Software Announcements	X	Optional
X	Technical Tips		No implementation required

DESCRIPTION:

Talaris, the manufacturer of the MiniMech dispenser, has approved the use of the MiniMech (and MultiMech) without the Teflon strips found on each side of the bay where the cassette rests. Talaris will no longer produce the dispensers with these strips.

Extensive testing verified that the dispenser will operate successfully without the Teflon strips with minimal wear. This change will eliminate the issue of the Teflon strip peeling off which leaves a sticky residue. If any of these strips are found peeling, feel free to remove them and their sticky residue completely. Whenever removing one strip, always remove the other.

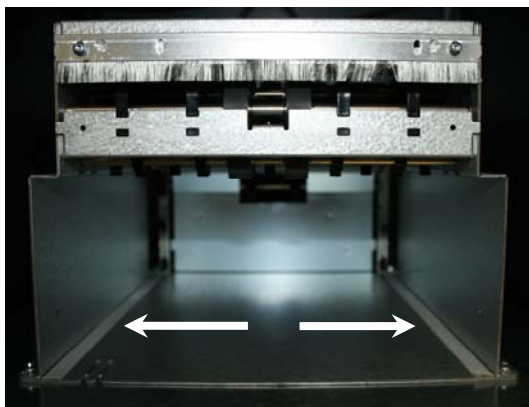

Teflon strips on each side of cassette bay



Peeling, worn Teflon strip

If you have any questions, please contact Technical Support or our Parts Department at 1-228-575-3100 from outside North America or toll free in the U.S./ Canada 1-800-259-6672.