



MODEL 9610
DISPENSING MECHANISM
INSTALLATION GUIDE

VERSION 1.0

07103-00018 06/01

CORPORATE HEADQUARTERS:

522 E. Railroad Street
Long Beach, MS 39560
PHONE: (228) 868-1317
FAX: (228) 868-0437

**RMA (RETURN MATERIAL AUTHORIZATION)
RETURN ADDRESS:**

21405 B Street
Long Beach, MS 39560

COPYRIGHT NOTICE

Copyright © 2001 Triton Systems, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form, by any means whatsoever, without the express written permission of Triton Systems, Inc.

PURPOSE


The following procedure assumes you are installing a Model 9610 dispensing mechanism into a Model 9600 ATM chassis.

PARTS SUPPLIED

PARTS SUPPLIED		
1	09005-00110	Dispenser Mechanism
1	22000-00400	Currency Cassette - US*
1	22000-00401	Currency Cassette - Canadian*
1	22000-00402	Currency Cassette - UK*
4	02054-00049	Screw, Pan Head Phillips, #8-32, 3/8-inch (9 mm)
1	03072-00004	Cable Clip, Tinnerman, Rubber Coated
1	02301-00004	Screw, #8-32, Hex Nut w/Ext Tooth Washer
1	07000-00200	US/Canadian Currency Label
* Cassette included in Kit will depend upon target country: US, UK or Canada.		
RECOMMENDED TOOLS		
	7/16-inch (11 mm) Wrench	
	Medium Phillips Screwdriver	

INSTALLATION PROCEDURE

1. Open the ATM control panel and ensure the power switch (on the power supply panel) is set to the OFF (0) position.
2. Unlock and open the security cabinet door. Extend the slide tray fully. Set the 9610 dispenser onto the tray. Turn the dispenser so that the rear of the unit (where the power and data cable connectors are located) may be accessed.
3. Locate the DC Power and EJ-to-Dispenser (Data) cables. Connect the cables to the mating connectors located on the back of the dispenser. **NOTE: Make sure the white strain clip on the DC Power Cable is pointing down.** Make sure the thumbscrews on the EJ-to-Dispenser cable are tightened.

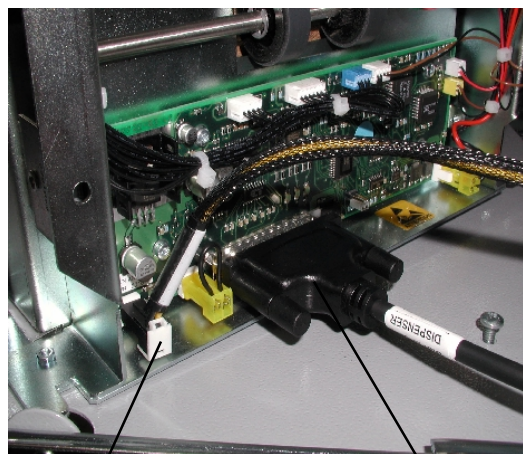

Make sure the connector on the dispenser DC Power cable is positioned as shown.

EJ-to-Dispenser Cable.


4. Turn the dispenser around with the cables facing the back of the cabinet and align the tabs and holes in the bottom of the dispenser with the mounting holes in the tray. Attach the dispenser to the tray using four included 3/8-inch (9 mm) Pan Head Phillips Screws (two on each side).

Model 9610 Dispenser Mechanism Installation



Attach the dispenser to the tray with two screws on each side.

5. Place the cable clip over the DC Dispenser Power Cable and the EJ-to-Dispenser (Data) cable. Attach the cable clip to the back right flange on the dispenser using the included #8-32 screw/nut.

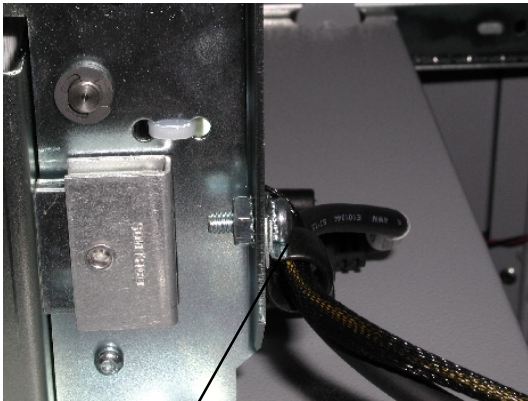

Attach the cable clip to the lower rear flange of the dispenser.

6. Slide the tray into the cabinet and back out again. Make sure the cables are free to move and do not catch on anything.



The cables should be routed through the back slide rail as shown.

7. Load the currency cassette with currency. Affix the proper denomination label to the cassette, as needed. Slide the dispenser back into the cabinet. Close and lock the cabinet door.
8. Turn the ATM power switch to the ON (I) position. Close and lock the control panel.